



# Audio 15

Supplement



9065843109

Order no. 6462 3209 13 Part no. 906 584 31 09 Edition 06-15



Mercedes-Benz


## Symbols


### **WARNING**

Warning notes make you aware of dangers which could pose a threat to your health or life, or to the health and life of others.

### **Environmental note**

Environmental notes provide you with information on environmentally aware actions or disposal.

 Notes on material damage alert you to dangers that could lead to damage to your vehicle.

 These symbols indicate useful instructions or further information that could be helpful to you.

▶ This symbol designates an instruction you must follow.

▶ Several consecutive symbols indicate an instruction with several steps.

(▷ page) This symbol tells you where you can find further information on a topic.

▷ ▷ This symbol indicates a warning or an instruction that is continued on the next page.

**Display** This text indicates a message on the display.

## Vehicle distributor

Mercedes-Benz USA, LLC  
One Mercedes Drive  
Montvale, NJ 07645-0350  
[www.mbusa.com](http://www.mbusa.com)  
[www.mbsprinterusa.com](http://www.mbsprinterusa.com)  
Customer Assistance Center:  
1-877-762-8267

Mercedes-Benz Canada, Inc.  
98 Vanderhoof Avenue  
Toronto, ON M4G 4C9  
[www.mercedes-benz.ca](http://www.mercedes-benz.ca)  
Customer Relations Department:  
1-800-387-0100

Mercedes-Benz USA, LLC and Mercedes-Benz Canada Inc. are Daimler companies.  
Canada only: "Authorized Sprinter Dealer" is defined as an authorized Mercedes-Benz Sprinter Dealer.

## Publication details

### Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mercedes-benz.com>

<http://www.mbusa.com> (USA only)

<http://www.mercedes-benz.ca> (Canada only)

### Editorial office

You are welcome to forward any queries or suggestions you may have regarding this Operator's Manual to the technical documentation team at the address on the inside of the front cover.

© Mercedes-Benz USA, LLC

© Mercedes-Benz Canada, Inc.

Mercedes-Benz USA, LLC and Mercedes-Benz Canada Inc. are Daimler companies.

Not to be reprinted, translated, or otherwise reproduced, in whole or in part, without written permission.

### Vehicle manufacturer

Daimler AG  
Mercedesstraße 137  
70327 Stuttgart  
Germany

## **Welcome to the world of Mercedes-Benz**

First of all, familiarize yourself with your Audio 15. Read this manual, particularly the safety and warning notices, before you drive off. This will help you to obtain the maximum pleasure from your Audio 15 and avoid endangering yourself and others.

The equipment and functions of your Audio 15 may differ depending on:

- model
- order
- country specification

Mercedes-Benz is constantly updating its systems to the state of the art.

Mercedes-Benz therefore reserves the right to introduce changes in:

- design
- equipment
- technology

Therefore, the descriptions provided may occasionally differ from your device.

Please consult an authorized Mercedes-Benz Center if you have any questions.

The manual and all Supplements are integral parts of the vehicle. You should always keep them in the vehicle and pass them on to the new owner if you sell the vehicle.

The technical documentation team at Daimler AG wishes you safe and pleasant motoring.



<b>Index</b> .....	<b>4</b>	<b>At a glance</b> .....	<b>9</b>
<b>Introduction</b> .....	<b>7</b>	<b>System settings</b> .....	<b>17</b>
		<b>Navigation system</b> .....	<b>27</b>
		<b>Telephone</b> .....	<b>29</b>
		<b>Audio</b> .....	<b>37</b>
		<b>Technical data</b> .....	<b>49</b>

<b>1, 2, 3 ...</b>	
<b>911 emergency call</b> .....	30
<b>A</b>	
<b>Audio fadeout</b> .....	20
<b>Authorized Mercedes-Benz Center</b> see Qualified specialist workshop	
<b>AUX function</b>	
Connecting a device .....	47
Important safety notes .....	38
Increasing the volume .....	48
Selecting .....	47
<b>B</b>	
<b>Balance</b>	
Setting .....	20
<b>Basic functions</b> .....	14
<b>Bass</b>	
Setting .....	20
<b>Becker® MAP PILOT</b> see Navigation	
<b>Bluetooth®</b>	
Activating/deactivating .....	21
Conditions .....	20
Connecting another mobile phone .....	24
De-authorizing (de-registering) a device .....	25
Displaying details .....	24
Pairing a mobile phone .....	21
Playing an MP3 .....	46
Selecting a playback option .....	46
Selecting a track .....	46
Settings .....	20
Starting and stopping playback .....	46
Unpairing .....	25
<b>Bluetooth® Audio</b> .....	45
Connecting an audio device .....	21
Connecting another audio device ...	24
Increasing the volume .....	47
Interrupting playback .....	46
Pairing an audio device .....	22
Pairing an audio device (external) ...	23
Reconnecting an audio device .....	24
Selecting .....	45
Unpairing an audio device .....	25
<b>C</b>	
<b>Call</b>	
Accepting .....	30
Ending .....	30
Making .....	31
Rejecting .....	31
<b>Call lists</b>	
Calling up an entry .....	34
<b>Call waiting</b>	
Accepting .....	33
<b>Calling</b> .....	31
Using Bluetooth® .....	30
<b>Changing folders</b> .....	43
<b>Cleaning</b> .....	8
<b>Copyright</b> .....	8
<b>Correct use</b> .....	7
<b>D</b>	
<b>Day design</b> .....	18
<b>Declarations of conformity</b> .....	7
<b>Deleting</b>	
Call lists .....	35
<b>Display</b>	
On-board computer .....	14
Overview .....	11
Selecting the design .....	18
Setting the brightness .....	18
Switching on/off .....	19
<b>E</b>	
<b>Equipment</b> .....	7
<b>Example of operation</b> .....	12
<b>External devices</b> .....	47
<b>F</b>	
<b>Factory settings</b> .....	26
<b>Fader</b>	
Setting .....	20
<b>Fast forward/rewind</b> .....	43
<b>Frequencies</b>	
Adjusting for radio stations .....	38
<b>Frequency input</b>	
Manual .....	38

- G**
- GPS reception** ..... 28
- H**
- Hands-free system**  
Switching on/off ..... 32
- L**
- Language**  
Setting ..... 25
- M**
- Media Interface**  
Supported file formats ..... 50
- Metadata**  
Displaying ..... 44
- Mobile phone**  
Connecting ..... 21  
Disconnecting ..... 25  
Displaying Bluetooth® details ..... 24  
Pairing ..... 21, 22  
Pairing (external) ..... 23  
Reconnecting ..... 23  
Selecting ..... 30
- MP3**  
Changing folders ..... 43  
Selecting a track ..... 42
- Mute function** ..... 14
- N**
- Navigation**  
Becker® MAP PILOT ..... 28  
GPS reception ..... 28  
Switching to ..... 28
- Night design** ..... 18
- O**
- On-board computer**  
Overview ..... 14
- Operating safety** ..... 7
- Overview of controls** ..... 10
- P**
- Pairing** ..... 21, 22
- Phone book** ..... 34  
Calling an entry ..... 35  
Calling up ..... 35  
Deleting an entry ..... 36  
Displaying details ..... 35
- Phone call**  
Dialing ..... 31
- Playback options** ..... 44
- Playlists**  
Playing back ..... 43
- Protection against theft** ..... 8
- Q**
- Qualified specialist workshop** ..... 8
- R**
- Radio**  
Calling up stored stations ..... 39  
Entering a frequency ..... 38  
Searching for a station ..... 38  
Selecting ..... 38  
Setting a station ..... 38  
Setting stations manually ..... 38  
Station list ..... 39  
Storing stations ..... 39  
Storing stations automatically ..... 39  
Storing stations manually ..... 39  
Switching wavebands ..... 40
- Rear view camera**  
Operation ..... 14
- Redial** ..... 32
- Reset** ..... 26
- Resetting**  
Factory settings ..... 26
- S**
- SD function**  
Displaying metadata ..... 44  
Displaying track information ..... 45  
Important safety notes ..... 40  
Inserting a memory card ..... 40  
Selecting ..... 41  
Selecting a track ..... 42

- Selecting playback options ..... 44
    - Switching folders ..... 43
  - SD memory card**
    - Ejecting ..... 41
    - Inserting ..... 40
  - Selecting active partition** ..... 44
  - Setting**
    - Stations ..... 38
    - Volume ..... 14
  - Settings**
    - Adjusting the display ..... 18
    - Brightness ..... 18
    - Display design ..... 18
    - Language ..... 25
    - Sound settings ..... 19
    - Time format ..... 18
  - Specialist workshop** ..... 8
  - Speed dial**
    - Calling a number ..... 36
  - Station list** ..... 39
  - Station search** ..... 38
  - Stations**
    - Calling up ..... 39
    - Selecting ..... 38
    - Setting manually ..... 38
    - Storing ..... 39
    - Storing automatically ..... 39
    - Storing manually ..... 39
  - Steering wheel with buttons**
    - Overview ..... 13
  - Switching on/off** ..... 14
  - Switching wavebands (radio)** ..... 40
- 
- T**
  - Telephone**
    - 911 emergency call ..... 30
    - Accepting/ending a call ..... 30
    - Entering phone numbers ..... 31
    - Important safety notes ..... 30
    - Making a call ..... 31
    - Making a call from a call list ..... 34
    - Redialing ..... 32
    - Rejecting a call ..... 31
    - Rejecting or accepting a waiting call ..... 33
    - Selecting ..... 30
    - Setting the reception and transmission volume ..... 33
    - Switching hands-free system on/off ..... 32
  - Telephone book**
    - Editing an entry ..... 36
  - Time**
    - Setting the format ..... 18
  - Tone settings**
    - Balance and fader ..... 20
    - Treble and bass ..... 20
  - Track**
    - Selecting by skipping to a track ..... 42
    - Selecting by track number ..... 42
    - Selecting from a track list ..... 42
  - Track information** ..... 45
  - Track list** ..... 42
  - Treble**
    - Setting ..... 20
- 
- U**
  - Unpairing** ..... 25
  - USB (Audio)**
    - Connecting a device ..... 41
    - Displaying metadata ..... 44
    - Displaying track information ..... 45
    - File structure ..... 50
    - Requirements ..... 50
    - Selecting ..... 41
    - Selecting a track ..... 42
    - Selecting playback options ..... 44
    - Switching folders ..... 43
- 
- V**
  - Volume**
    - Setting ..... 14



## Operating safety

### Important safety notes

#### WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

Observe the legal requirements for the country you are in.

Bear in mind that at a speed of only 50 km/h the vehicle covers about 14 m every second.

When using the device please follow:

- the safety information in these instructions
- traffic rules and regulations
- motor vehicle laws and safety standards

**i** Tampering with electronic components and their software could cause these to stop working. Even systems that have not been modified could be affected because the electronic systems are connected. Electronic malfunctions can seriously jeopardize the operational safety of your vehicle.

Always have all work on or modifications to electronic components carried out at a qualified specialist workshop.

### Proper use

Audio 15 can be used to receive radio stations, to play back SD memory cards and other data carriers and to make calls via the Bluetooth® function. Audio 15 can also be used for the playback of the image from the rear view camera and as a navigation system

in conjunction with the Becker® MAP PILOT (optional).

Observe the specified requirements for data carriers and permissible formats.

### Equipment

This Supplement describes Audio 15 with all standard and optional equipment available at the time of this Supplement going to print. Country-specific variations are possible. Please note that your Audio 15 system may not be equipped with all the features described. This also applies to systems and functions relevant to safety. Therefore, your Audio 15 equipment may differ from certain descriptions and illustrations. Should you have any questions concerning equipment and operation, consult any authorized Mercedes-Benz Center.

This supplement is an integral part of the vehicle. Keep it in the vehicle together with the Operating Instructions.

### Declaration of conformity

#### Radio-based vehicle components

**i USA only:** The wireless devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. These devices may not cause interference, and
  2. These devices must accept any interference, including interference that may cause undesired operation of the device.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**i Canada only:** The wireless devices of this vehicle comply with Industry Canada RSS-210 standard. Operation is subject to the following two conditions:

1. These devices may not cause interference, and
2. These devices must accept any interference, including interference that may cause undesired operation of the device.

### Information on copyright

### Registered trademarks



**Bluetooth**® technology is the standard for short-range wireless data transmission of up to approximately 10 meters.

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.



An SD memory card is a digital storage medium.

SD memory cards carry the logo displayed above. This logo is a registered trademark of SanDisk Corporation.

### Qualified specialist workshops

Always have all work on or modifications to electronic components carried out at a qualified specialist workshop. This workshop has the necessary specialist knowledge and tools to carry out the work required. In particular, work relevant to safety or on safety-related systems must be carried out at a qualified specialist workshop.

An authorized Mercedes-Benz Center is a qualified specialist workshop.

### Protection against theft

This device is equipped with technical provisions to protect it against theft.

Further information on protection against theft can be obtained from an authorized Mercedes-Benz Center.

 
### Cleaning

To clean, use a slightly damp cloth. The cloth must be soft and lint-free. For stubborn dirt, you can use a mild cleaning agent. In particular, do not clean the display with alcohol, acid or an abrasive cleaning agent.

<b>Operating system</b> .....	10
<b>Overview of operation with steering wheel buttons</b> .....	13
<b>Display overview of the on-board computer</b> .....	14
<b>Basic functions</b> .....	14

## Operating system



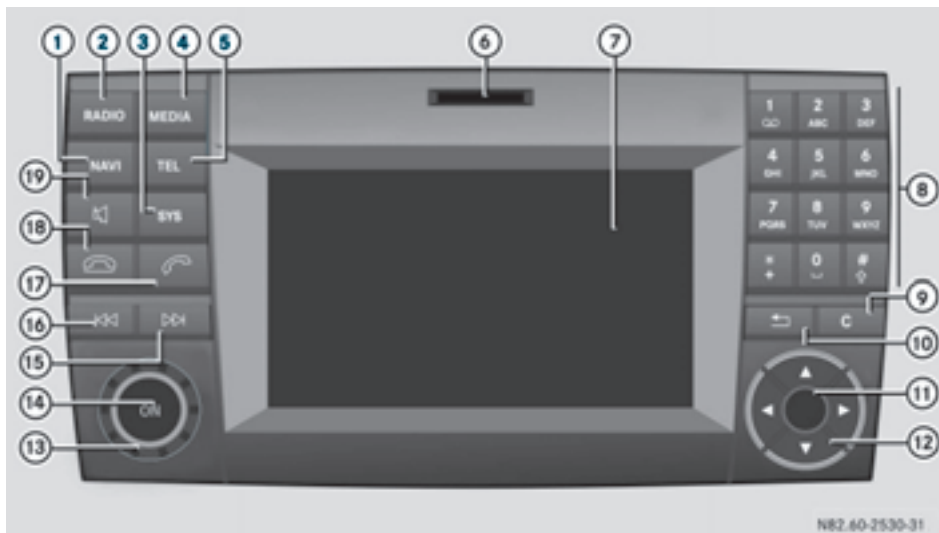


## Overview






NR2.60-2530-31

 	Function	Page
①	<b>NAVI</b> Calls up navigation	28
②	<b>RADIO</b> Selects radio Switches wavebands	38 40
③	<b>sys</b> Makes system settings	18
④	<b>MEDIA</b> Selects audio source: SD memory card USB device AUX function BT Audio	41 41 47 45
⑤	<b>TEL</b> Selects the telephone function	30
⑥	SD memory card slot	
⑦	Display	11

	Function	Page
⑧	<b>0</b> to <b>9</b> <b>*</b> <b>#</b> Selects audio source: Stores and calls up a station Sets the frequency manually Selects a track Telephone number entry Searches for a phone book entry Passkey entry	39 38 38 31 35 22
⑨	<b>c</b> Deletes characters	
⑩	<b>←</b> Exits menu or jumps up one menu level higher	
⑪	Navigates within the menus (turn) Confirms selection/entry (press)	

	Function	Page
12	 Navigates within the menus Station search Skip Fast forward/rewind	38 42 43
13	 Sets the volume	14
14	 Switches on/off	14
15	 Station search Skips forward Fast forward	38 42 43
16	 Station search Skips back Rewind	38 42 43

 	Function	Page
17	 Accepts a call Makes a call Redials Accepts a waiting call	30 31 32 33
18	 Ends a call Rejects a call Rejects a waiting call	30 31 33
19	 Mutes audio source Pauses SD memory card/USB device Switches the hands-free system on/off	14 32



- ① Status bar
- ② Main menu bar
- ③ Display/selection window
- ④ Menu bar

The display shows the function currently selected with its current settings and associated menus ④. The following functions and menus are available:

Operation	Menu
Navigation system	via Becker® MAP PILOT
Radio	Radio Presets FM Sound
SD memory card	SD Music Media Sound
USB device	USB Music Media Sound

Operation	Menu
AUX	AUX Volume Sound
BT Audio	BT Audio Media Sound
Telephone	Telephone Call lists
System	Settings Display off

### Entry routines

 
 

#### Control knob




Use the control knob to navigate in the menus.

Movement	Operation
Turn	Selects menus and entries
Press	Confirms the selection

#### Buttons and their functions

In addition to the control knob, you can also operate Audio 15 with the following buttons:

Button	Operation
	Jumps back one menu level When route guidance is active: jumps to main menu
	Deletes last character entered When route guidance is active: cancels route guidance
	Selects the previous line in the menu







Button	Operation
	Selects the next line in the menu
	Jumps one entry to the right Jumps back to the main menu Shows other editing options/menus
	Jumps one entry to the left Jumps up one menu level higher Hides other editing options/menus

 
**i** When route guidance is active, all other buttons for navigation are inoperative.


 
#### Example of operation

 
The following example shows, step by step, how to select and play tracks which have been saved on an SD memory card.


 
**Initial situation:** you are listening to the radio and the SD memory card is inserted in the slot.

- ▶ Press the  button.  
Audio 15 calls up SD mode.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Use the control knob or press the  and  buttons to select **Music**.
- ▶ Press the rotary knob/pushbutton.  
The display shows the menu. You see the name of the memory card which is inserted and a selection list.
- ▶ Use the control knob or press the  and  buttons to select **Playlists**.
- ▶ Press the rotary knob/pushbutton.  
The display shows all playlists which have been saved on the SD memory card.

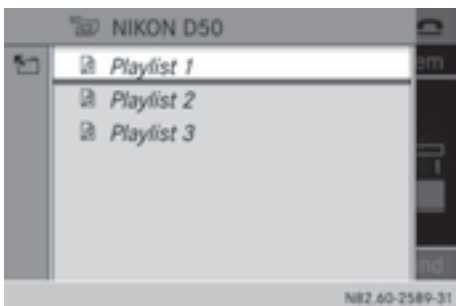

- ▶ Use the control knob or press the  and  buttons to select the desired playlist.
- ▶ Press the rotary knob/pushbutton. The display shows a list of titles which belong to the playlist.


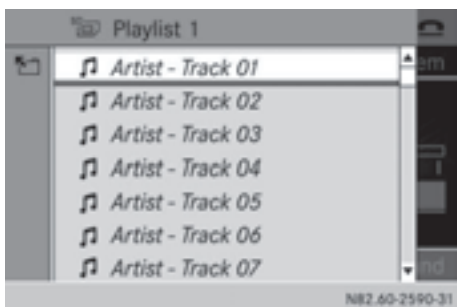








- ▶ Use the control knob or press the  and  buttons to select the track you wish to play first.
- ▶ Press the rotary knob/pushbutton. Audio 15 plays the selected track and closes the list.

## Overview of operation with steering wheel buttons

  

Steering wheel (example: Sprinter)

   	But- ton	Operation
①		On-board computer display
②		Increases the volume
		Reduces the volume
		Accepts an incoming call/ redials
		Ends/rejects a call
③		Selects next main menu
		Selects previous main menu
		Jumps up in the menu bar
		Jumps down in the menu bar

- i** For further information on operation with the steering-wheel buttons, see the vehicle's Operating Instructions.

## Display overview of the on-board computer

The display of the on-board computer shows the following menus and functions of Audio 15:

Menu	Function
Navigation system	Route guidance
Radio	Selects the stored stations on the current waveband
SD/USB	Selects tracks in the current folder
Telephone	Accepts a call Ends/rejects a call Performs calls via the phone book menu Performs calls via call lists
BT Audio	Selects a track

- i** The operation of certain functions is described in the sections on basic functions, radio, SD memory card, USB device and Bluetooth®.

## Basic functions

### Switching on/off

- ▶ Press the **(ON)** on/off button. Once switched on, Audio 15 calls up the most recently active function.
- i** Audio 15 switches itself off automatically when you remove the ignition key.
- i** Audio 15 switches itself off automatically when the condition of charge of the battery is low.
- i** If Audio 15 is on while the ignition is switched off, it will switch itself off automatically after approximately 30 minutes to save the vehicle battery.

### Setting the volume

- ▶ Turn the volume control **(ON)** during playback.
- or
- ▶ Press the **[+]** or **[-]** button on the steering wheel.

### Activating/deactivating the mute function

- ▶ Press the **[M]** button. The sound from the audio source is switched on or off. When the sound has been muted, the **[M]** symbol is shown in the status bar.

- i** If you change the audio source or adjust the volume, the sound switches on again automatically.
- i** When the mute function is active, playback from the SD memory card, USB device and BT audio is paused. When you deactivate the mute function, playback will resume from the position where it was paused.

### Sprinter rear view camera

#### Important safety notes

- !** Objects that are not at ground level appear further away than they actually are, for example:
    - the bumper of the vehicle parked behind
    - the drawbar of a trailer
    - the ball coupling of a trailer tow hitch
    - the tail-end of a truck
    - slanted posts
- Only use the camera guide lines for orientation. Do not get any closer to objects than the lowest horizontal guide line. You may otherwise damage your vehicle and/or the object.



The rear view camera is only an aid. It cannot replace your own awareness of the immediate surroundings. You are responsible for safe maneuvering, parking and pulling away. When maneuvering and parking, make sure that there are no persons, animals or objects in the maneuvering area.

The rear view camera may show obstacles in perspectival distortion, incorrectly or not at all. The rear view camera cannot display all objects located very near and/or under the rear bumper. It does not warn you of a collision, persons or objects.

The area behind the vehicle is displayed in a mirrored fashion, as in the rear-view mirror or the exterior mirrors.

The rear view camera covers the immediate surroundings of the vehicle and assists you, for example, when parking.

Under the following circumstances, the rear view camera will not function, or will function in a limited manner:

- there is very heavy rain, snow or fog
- at night or when the vehicle is in very dark places
- if you are parked somewhere very dark
- the surrounding area is illuminated with fluorescent light. The display may flicker.
- if there is a sudden change in temperature, e.g. when driving into a heated garage in winter
- if the ambient temperature is very high
- if the camera lens is dirty or obstructed
- if the rear of the vehicle is damaged. In this case, have the camera position and setting checked at a qualified specialist workshop

### Rear view camera operation

The image from the rear view camera is shown in the display when reverse gear is engaged if:

 
- your vehicle is equipped with a rear view camera
- the ignition is switched on

Guide lines in the display (depending on the vehicle's equipment) help you with backing up.

### Static guide lines

Depending on the vehicle's equipment, the rear view camera image displays static guide lines. These guide lines assist you with backing up.

The static guidelines have the following meanings:

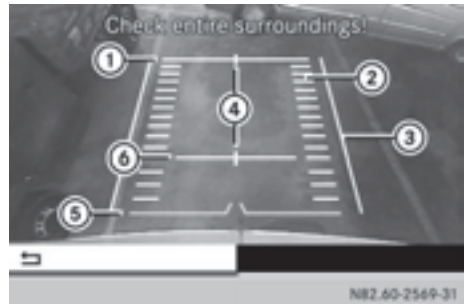


- ① Distance from the rear of the vehicle, 10 ft (3 m)
  - ② Vehicle width (to outer edge of wheels)
  - ③ Vehicle width including exterior mirrors
  - ④ Vehicle center mark (e.g. to improve visibility of a trailer drawbar)
  - ⑤ Minimum distance to rear of the vehicle (dependent on width of step)
  - ⑥ Distance from the rear of the vehicle, 3 ft (1 m)
- i** Please note that all distance specifications are approximate. Additional attachments, such as access steps, are not accounted for in these distance specifications.

### Deactivating the rear view camera

When you shift out of reverse gear, the rear view camera is automatically deactivated after 15 seconds. Additionally, you can deactivate it manually.

▶ Press the **NAVI**, **RADIO**, **MEDIA**, **TEL**, **sys** or  button.

or

▶ Select  in the menu bar.  
The display shows the previous view.


### Activating the rear view camera image when driving forwards

This function is available for the Sprinter.

**i** When driving forwards, the display shows no guide lines.

▶ Press the **sys** button for longer than two seconds.  
The display shows the rear view camera image.

or

- ▶ Press the **sys** button.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Rear View Camera**.  
The display shows the rear view camera image without guide lines.

### Vito rear view camera

#### Rear view camera operation

The image from the rear view camera is shown in the display when reverse gear is engaged if:

- your vehicle is equipped with a rear view camera
- the ignition is switched on

Guide lines in the display (depending on the vehicle's equipment) help you with backing up.

When the function is activated, the display automatically switches back to the previously selected display if:


- you select transmission position **P**
- drive forwards slightly

### Deactivating the rear view camera

When you shift out of reverse gear, the rear view camera is automatically deactivated after 15 seconds. Additionally, you can deactivate it manually.

▶ Press the **NAVI**, **RADIO**, **MEDIA**, **TEL**, **sys** or  button.

or

▶ Select  in the menu bar.  
The display shows the previous view.

If the vehicle is equipped with Active Parking Assist: the rear view camera is available during the entire automatic parking procedure after the reverse gear has been engaged for the first time.

### Information in the vehicle's Operating Instructions

 
You can find further information about the rear view camera in the vehicle's Operating Instructions.

Display settings .....	18
Sound settings .....	19
Bluetooth® settings .....	20
System language .....	25
Resetting to factory settings .....	26

## Display settings

### Setting the brightness


- ▶ Press the **[sys]** button.
- ▶ Select **Settings**.
- ▶ Select **Display**.

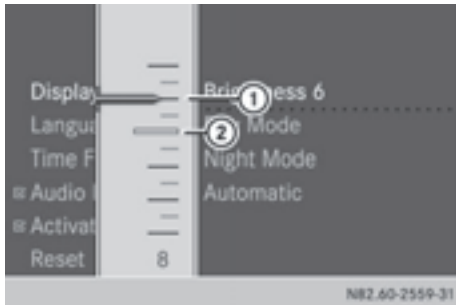

- ▶ Select **Brightness**.  
The display shows the brightness with current level ① and previous level ②.
- ▶ Set the brightness to the desired level.
- ▶ Press the rotary knob/pushbutton.  
The new setting is saved.
- ▶ Press the **[←]** button.
- ▶ **To exit system settings:** press the **[RADIO]** or **[MEDIA]** button.

### Setting the display design

 - ▶ Press the **[sys]** button.
- ▶ Select **Settings**.
- ▶ Select **Display**.

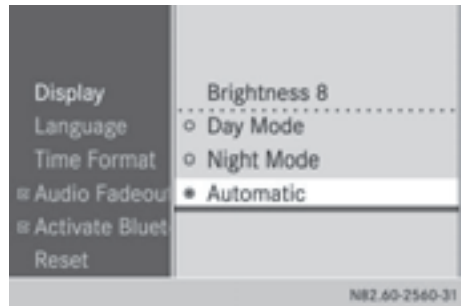


- ▶ Select **Day Mode**, **Night Mode** or **Automatic**.




The ● dot indicates the display design selected.

- ▶ **i** When the **Automatic** setting is selected, Audio 15 (optionally) evaluates the readings from the automatic vehicle light sensor and automatically switches the display designs. On vehicles without light sensors, Audio 15 switches over to the on-board computer depending on the light switch setting and dimming setting.
- ▶ Press the **[↔]** button.
- ▶ **To exit system settings:** press the **[RADIO]** or **[MEDIA]** button.

### Setting the time format

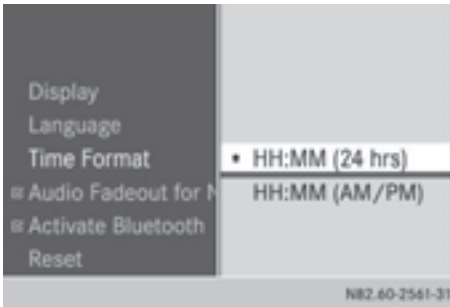 
- ▶ **i** The time is set via the on-board computer, see the vehicle's Operating Instructions. On vehicles with a tachograph, the time must be set on the tachograph.
- ▶ Press the **[sys]** button.
- ▶ Select **Settings**.
- ▶ Select **Time Format**.



- ▶ Set the desired time format:
  - **HH:MM (24 hrs)**: 24-h format, e.g. 13:15
  - **HH:MM (AM/PM)**: 12-h format, e.g. 1:15 pm
 The • dot indicates the selected time format.
- ▶ Press the  button.
- ▶ **To exit system settings**: press the  or  button.

### Switching the display on/off




- ▶ Press the  button.
- ▶ Select **Display Off**.  
The display is switched off. Audio 15 functions remain available. The selected audio source remains audible.
- ▶ **To switch on the display again**: press the control knob.
- ▶ **i** Alternatively, you can call up a different function (e.g. radio).

### Sound settings

#### Calling up sound settings

You can make individual tone settings for the following audio sources:

 
- Radio
  - SD/USB
  - AUX
  - Bluetooth® audio
- ▶ Select the audio source for which you wish to set the sound.
  - ▶ Press the  button repeatedly until the menu bar is selected.



- ▶ Select **Sound**.  
The display shows the current sound settings.

### Adjusting treble and bass

- ▶ Call up the sound settings.

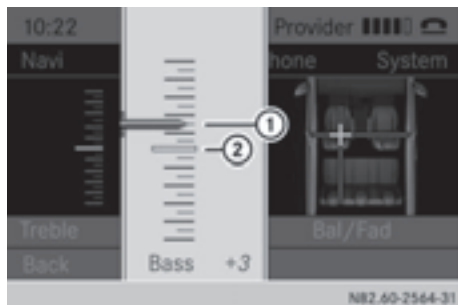

- ▶ Select **Treble** or **Bass**.  
The display shows the sound setting with current sound level ① and previous sound level ②.
- ▶ Select the desired sound level (-10 to +10).

### Setting the sound distribution

You can adjust the balance and fader depending on the vehicle's equipment.

- Balance: right/left distribution
- Fader: front/rear distribution
- ▶ Call up the sound settings.



- ▶ Select **Bal/Fad**.  
You see a schematic diagram of the passenger compartment and the current sound distribution.
- ▶ Set the sound distribution with the , , and buttons.
- ▶ Press the control knob.

### Exiting sound settings

- ▶ Press the button.
- or
- ▶ Press the button.
- ▶ Select **Back**.  
Audio 15 stores the new sound settings.

### Switching audio fadeout on/off

This function can only be switched on if the optional navigation module is installed. Audio fadeout reduces the volume of other audio sources, such as the radio, when you receive a navigation message.

- ▶ Press the button.
- ▶ Select **Settings**.



- ▶ Select **Audio Fadeout for Nav Instructions**.
- ▶ Switch the function on  or off  using the control knob.
- ▶ Press the button.
- ▶ **To exit system settings:** press the or button.

## Bluetooth® settings

### Requirements for a Bluetooth® connection

With Audio 15, you can use the following functions via Bluetooth®:

- make a phone call using a mobile phone
- play an audio file via an audio device

To do so, the following conditions must be met:

- you require a mobile phone with Bluetooth® or an audio device with Bluetooth® (Bluetooth® device).
- the Bluetooth® device must be located inside the vehicle in the vicinity of Audio 15.
- the Bluetooth® function of Audio 15 is activated (▷ page 21).
- the Bluetooth® function of the Bluetooth® device is activated.
- the device must support the A2DP and AVRCP audio profiles.

**i** Information on the Bluetooth® mobile phones and audio devices recommended by Mercedes-Benz is available from qualified specialist workshops.

### Activating/deactivating the Bluetooth® function

- ▶ Press the  button.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Settings**.



- ▶ **To activate:** select **Activate Bluetooth**. The display shows the  symbol. The Bluetooth® function is activated.

- ▶ **To deactivate:** press the control knob again. The display shows the  symbol. The Bluetooth® function is deactivated.

- ▶ **To exit the menu:** press the  button.

**i** The Bluetooth® function will remain active until you deactivate it again. If you switch Audio 15 off, the existing Bluetooth® connection is disconnected. The call can be continued on the mobile phone. When switching on, Audio 15 automatically establishes the connection.

### Pairing/unpairing a Bluetooth® device

#### What does pairing mean?

When pairing, an authorized connection is established between Audio 15 and the Bluetooth® device.

Your mobile Bluetooth® device must be visible. Information on how to make your Bluetooth® device visible can be found in the operating instructions of your Bluetooth® device.

If Audio 15 and your Bluetooth® device are paired, they will connect automatically as soon as there is a Bluetooth® connection.

**i** Audio 15 saves the pairing data of up to 10 Bluetooth® devices. If an additional Bluetooth® device is coupled, Audio 15 overwrites the pairing data for the Bluetooth® device that has not been connected to it for the longest period of time.

There are two ways of pairing:

- **Bluetooth® pairing:** Audio 15 searches for the Bluetooth® device and starts the pairing process
- **Bluetooth® external:** the Bluetooth® device searches for Audio 15 and starts the pairing process

**i** If you pair a mobile phone as an audio device, it is automatically paired as a mobile phone as well, as long as your mobile phone supports this.

### Pairing a Bluetooth® device (mobile phone/audio device) using Bluetooth® pairing

▶ Press the **TEL** button.

or

 
- ▶ Select the Bluetooth® audio function.
- ▶ Press the **▼** button repeatedly until the menu bar is selected.
- ▶ Select **Telephone/BT Audio**.
- ▶ **Connect Phones/Bluetooth Device List**.
- ▶ Select **Update**.

Audio 15 searches for Bluetooth® devices within range for a certain period of time.

If at least one Bluetooth® device is found, the display shows the Bluetooth® name of the device.

If Audio 15 does not find a Bluetooth® device, the **Search for Bluetooth devices failed** message is shown in the display.

▶ **To search again:** select **Update**.

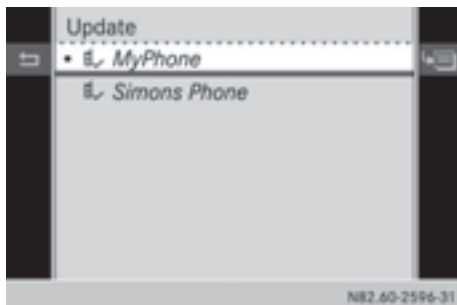

- ▶ Select the desired Bluetooth® device using the control knob.  
The display shows the input menu for the passkey.



▶ **To enter the passkey:** enter an easy to remember, four-digit number using the **0** to **9** number keys.

▶ To confirm the entry: select **OK**.

or

▶ Select four digits in the number bar using the control knob.

▶ Select **OK**.

The Bluetooth® device is authorized.

▶ Select Bluetooth® device name **MB Bluetooth** on the device.

▶ Enter the four-digit number selected previously on the Bluetooth® device, and confirm.

▶ Confirm possible prompts using the Bluetooth® device.

The **Authorization successful** message is shown in the display. You will see the Bluetooth® name of the Bluetooth® device in the display/selection window.


**i** When the **Authorization failed** message is displayed, you may have exceeded the prescribed time period. Repeat the procedure.

Alternatively, the pairing was only deleted on the Bluetooth® device. In this case, the Bluetooth® device must be unpaired and then paired again.



## Pairing a Bluetooth® device externally (mobile phone/audio device) using Bluetooth®

 - ▶ Press the **TEL** button.
- or
- ▶ Select the Bluetooth® audio function.
- ▶ Press the **▼** button repeatedly until the menu bar is selected.
- ▶ Select **Telephone/BT Audio**.
- ▶ **Connect Phones/Bluetooth Device List**.  
The **Update** message is shown in the display.
- ▶ Select the list symbol next to the entry using the **▶** button.
- ▶ Press the control knob.

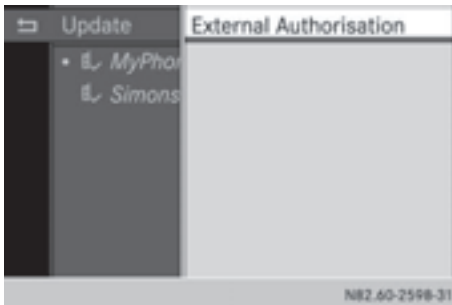

- ▶ Select **External Authorization**.
- ▶ Start the Bluetooth® scan process on the Bluetooth® device.
- ▶ Select Bluetooth® device name **MB Bluetooth** on the device.  
A prompt appears in the display asking whether the Bluetooth® device should be authorized.
- ▶ **To authorize:** select **Yes**.  
The Bluetooth® device is authorized.



- ▶ **To enter the passkey:** using the number keys **0** to **9**, enter an easy to remember, four-digit number.
- ▶ Select **OK**.
- or
- ▶ Select four digits in the number bar using the control knob.
- ▶ Select **OK**.
- ▶ Enter the number selected previously on the Bluetooth® device, and confirm.
- ▶ Confirm possible prompts using the Bluetooth® device.  
The **Authorization successful** message is shown in the display. You will see the Bluetooth® name of the Bluetooth® device in the display/selection window.
- i** When the **Authorization failed** message is displayed, you may have exceeded the prescribed time period. Repeat the procedure.

## Reconnecting a Bluetooth® device

### Reconnecting a mobile phone

Audio 15 always searches for the last connected Bluetooth® device. If the last connected Bluetooth® device cannot be connected, Audio 15 searches for the Bluetooth® device that was connected prior to that.

### Reconnecting an audio device

Audio 15 connects automatically to a Bluetooth® audio device in the following cases:



- both previously connected mobile phones were used as audio devices
- the mobile phone establishes the connection automatically

**i** Audio 15 does not connect automatically to an audio device that does not have a telephone function, even if this was the last Bluetooth® device connected.

- ▶ **To reconnect an audio device without a telephone function:** select the Bluetooth® audio function.

If no audio device is connected, the **No Bluetooth Audio Device Connected** message appears in the display.



- ▶ Use the  or  button to select **Connect Last Device**.
- ▶ Press the control knob.  
Audio 15 searches for the audio device. If it finds an audio device, it is connected.


### Connecting another Bluetooth® device (mobile phone/audio device)


If you have authorized more than one Bluetooth® device, you can switch between the devices.

 
**i** You can only switch to another authorized phone if you are not currently making a call.

- ▶ Press the  button.

or

- ▶ Select the Bluetooth® audio function.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Telephone/BT Audio**.
- ▶ **Connect Phones/Bluetooth Device List**.

The display shows all paired Bluetooth® devices. The current Bluetooth® device is identified by the  dot.

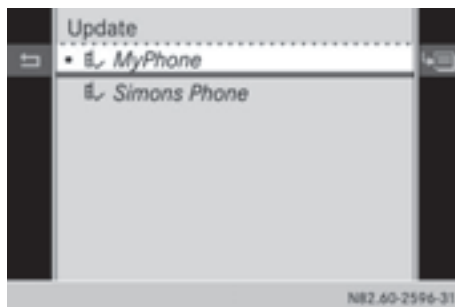


- ▶ Select the Bluetooth® device that you wish to connect.  
Audio 15 searches for the Bluetooth® device. If it finds a Bluetooth® device, it is connected.


**i** Audio 15 can only be connected to one Bluetooth® device at any one time.


### Displaying Bluetooth® details

 
- ▶ Press the  button.


or

- ▶ Select the Bluetooth® audio function.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Telephone/BT Audio**.
- ▶ **Connect Phones/Bluetooth Device List**.



The display shows all paired Bluetooth® devices. The current Bluetooth® device is identified by the  dot.

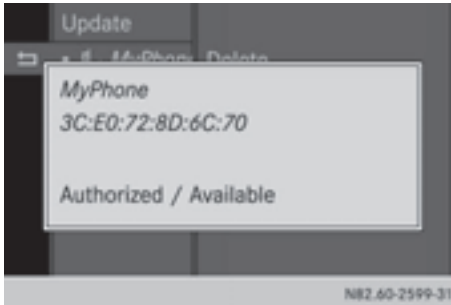 - ▶ Select the Bluetooth® device whose details you wish to see.
- ▶ Use the  button to select the icon next to the entry.




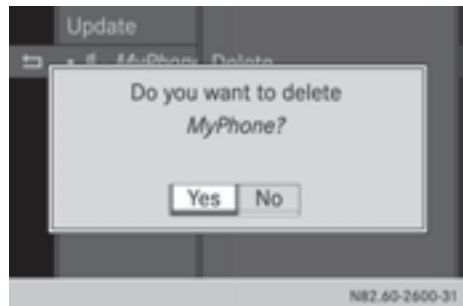 
- ▶ Select **Details**.  
The display shows the following information on the selected Bluetooth® device:
  - Bluetooth® name
  - Bluetooth® address
  - availability
  - authorization status
- ▶ **To exit the detailed view:** press the  button.

### Unpairing a Bluetooth® device (mobile phone/audio device)

- ▶ Press the  button.
- or
- ▶ Select the Bluetooth® audio function.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Telephone/BT Audio**.
- ▶ **Connect Phones/Bluetooth Device List**.  
The display shows all paired Bluetooth® devices. The current Bluetooth® device is identified by the • dot.



- ▶ Select the Bluetooth® device that you wish to unpair.
- ▶ Select the list symbol next to the entry using the  button.
- ▶ Select **Delete**.  
A prompt appears in the display asking whether the Bluetooth® device should be de-authorized.



- ▶ **To unpair:** select **Yes**.  
The Bluetooth® device is de-authorized and deleted from the device list.
- ▶ **To cancel the unpairing process:** select **No**.  
The Bluetooth® device is not unpaired from Audio 15. You have canceled the process.

### System language

As standard, Audio 15 accepts the language set in the on-board computer. You can also set the language independently of the on-board computer.

**i** You must set the language of the navigation system separately.

- ▶ Press the **sys** button.
- ▶ Select **Settings**.
- ▶ Select **Language**.

The display shows a list of available languages. The **•** dot indicates the currently set language.



- ▶ Select the desired language.  
The Audio 15 display texts are shown in the selected language.

Or

- ▶ Select **Synchronize Languages**.  
The Audio 15 display texts are shown in the display language selected for the on-board computer.
- ▶ **To exit system settings:** press the **RADIO** or **MEDIA** button.

## Resetting to factory settings

 
You can reset the settings of Audio 15 to the factory settings. This will delete all personal data (station memory, phone book etc.).

**i** Resetting to factory settings is useful when you sell the vehicle, for example.

- ▶ Press the **sys** button.
- ▶ Select **Settings**.



- ▶ Select **Reset**.  
A prompt appears in the display asking whether the data should be deleted.

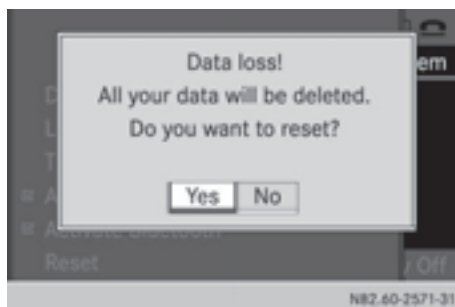

- ▶ **To delete:** select **Yes**.  
The display shows a further prompt.
- ▶ Confirm the second prompt with **Yes** as well.  
Audio 15 is reset and restarted.

or

- ▶ **To cancel the deleting process:** select **No**.  
Audio 15 is not reset.

Resetting without deleting your personal data:

- ▶ Press and hold the **ON** on/off button for approximately 10 seconds.  
Audio 15 is reset.

Important safety notes .....	28
Becker® MAP PILOT navigation module .....	28
GPS (Global Positioning System) .....	28
Preparing navigation .....	28

## Important safety notes

### WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

Observe the legal requirements of the country in which you are currently driving.

The navigation system calculates the route to the destination without taking account of the following, for example:

- traffic lights
- stop and give way signs
- parking or stopping restrictions
- road narrowing
- other road and traffic rules and regulations

The navigation system may provide incorrect navigation announcements if the surroundings do not correspond to the data on the digital map. For example, a route may have been diverted or the direction of a one-way street may have changed.

For this reason, you must always observe road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the system's driving recommendations.


## Becker® MAP PILOT navigation module

With the Becker® MAP PILOT navigation module, you can upgrade Audio 15 to a fully-fledged navigation system.

Further information can be found under <http://www.beckermappilot.com>.


## GPS (Global Positioning System)

Position finding and route guidance take place using GPS (Global Positioning System). For this purpose, the navigation module has an integrated GPS receiver that receives the satellite signals and determines your geographical location.




-  Without GPS reception, route guidance is not possible.

## Preparing navigation

### Inserting the navigation module

-  Switch off the ignition before removing or inserting the navigation module.
- ▶ Open the glove box.
- ▶ Insert the navigation module into the device holder.  
The battery built into the navigation module starts charging when the vehicle ignition is switched on.
- ▶ Remove the catch on the front side of the device holder.  
This way, the navigation module is secured, as well as protected against theft.
- ▶ Close the glove box.

### Switching on the navigation system

- ▶ Press the  button.
- or
- ▶ Press the  button repeatedly until the main menu bar is selected.
- ▶ Select **Navi**.  
The display shows the main menu of the navigation system.
-  If the battery was completely discharged, it takes up to 1 minute before the navigation system is ready.

General notes .....	30
Using the telephone .....	30

## General notes

### Important safety notes

#### WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident. Only operate this equipment when the vehicle is stationary.

Observe the legal requirements of the country in which you are currently driving.

### Call disconnection while the vehicle is in motion

A call may be disconnected if:

- there is insufficient GSM network coverage in certain areas.
- you move from one GSM or UMTS transmitter/receiver area (GSM/UMTS cell) into another and no channels are free.
- you use a SIM card which is not compatible with the network available.
- you are using a mobile phone with "Twin-card" and the mobile phone with the second SIM card is already logged into the network.

### "911" emergency call

Making emergency calls without entering a PIN is only possible using the mobile phone. The **911** emergency call number is a public service. Any misuse is punishable by law.




## Using the telephone

### Conditions



The following requirements must be met in order to make calls using Audio 15:

- The Bluetooth® function of Audio 15 is activated (▷ page 21).
- The Bluetooth® function of the mobile phone is activated.
- The mobile phone is paired and connected to Audio 15 (▷ page 21).

### Selecting the telephone function

- ▶ Press the  button.
- or
- ▶ Press the  button.
- or
- ▶ Press the  button repeatedly until the main menu bar is selected
- ▶ Select **Te1**.  
The display shows the telephone main menu.



- ① Network provider of mobile phone currently connected
- ② Signal strength of mobile phone network
- ③  or  receiver symbol
- ④ Bluetooth® name of the currently connected mobile phone
- ⑤ Displays call lists
- ⑥ Calls up other functions
- ⑦ Displays the phone book
- ⑧ Character bar

### Accepting and ending a call

When you receive a call, you will hear a ringing tone via the Audio 15 loudspeakers. The

 



phone number of the caller is shown in the display, if it is not withheld.

- i** If the mobile phone supports it, the ringtone of the mobile phone is played to signal an incoming call. Otherwise, you will hear the ringtone specified by Audio 15.

► **To accept a call:** press the  button.

or

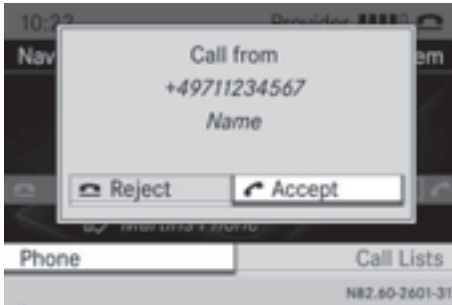


- Select **Accept** in the display. The call is played over the Audio 15 loudspeakers. Audio 15 mutes the active audio source.
- Use the control knob to adjust the call volume, if desired.
- **To end a call:** press the  button. Audio 15 plays the active audio source again.

### Rejecting a call

 ► Press the  button.


or

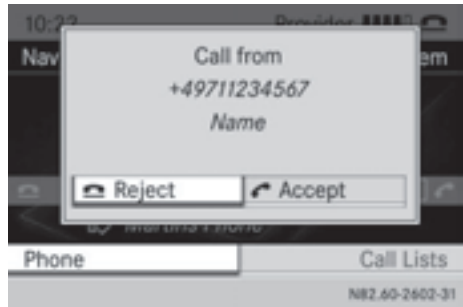





- Select **Reject** in the display. Audio 15 plays the current audio source again.

### Making a call

   

#### Entering a phone number using the number keys


► Press the  button.

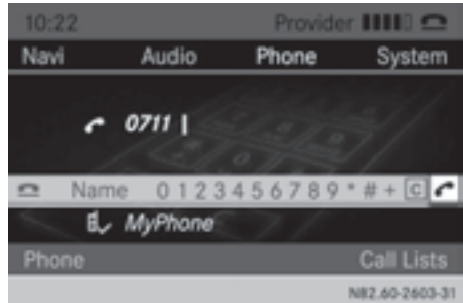


► Enter the desired phone number using the  to  number keys and the  button.

 **i** Notes on the  button:

 
- to enter a star: press the  button once
- to enter a plus: press the  button twice within approx. 1.5 seconds

 ► **To delete individual digits:** press the  button.

► **To delete the entire numerical sequence:** press and hold the  button




until the entire numerical sequence is deleted.

or



- ▶ Press the  button.
- ▶ **To complete an entry and make a call:** press the  button. This initiates dialing.

### Entering a phone number using the control knob

You can also enter a phone number via the display using the control knob.

- ▶ Press the  button. The entry line is selected.
- ▶ Select and confirm the digits of the phone number with the control knob.
- ▶ **To delete individual digits:** select .
- ▶ **To delete the entire numerical sequence:** select  repeatedly until the entire numerical sequence is deleted.



or

 
- ▶ Select .
- ▶ **To finish the entry and make a call:** select . This initiates dialing.


### Calling a contact from the telephone book

It is also possible to call contacts from your telephone book (▷ page 35).



### Redialing

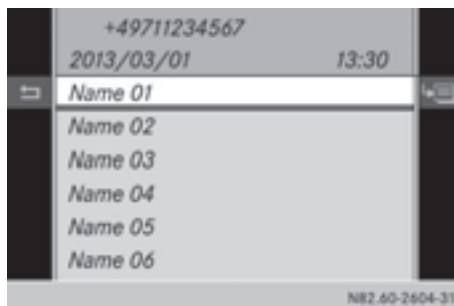- ▶ Press the  button.
- ▶ Press the  button. The display shows the most recently dialed phone numbers.



- ▶ Select the desired telephone number.
- ▶ Press the  button. This initiates dialing.


### Canceling dialing

- ▶ Press the  button when dialing.
- or
- ▶ Select  in the display. Audio 15 plays the active audio source again.



### Switching the hands-free system on/off

You can switch the hands-free function on or off during a call.

- ▶ **i** When making a call, instead of **Call Lists**, the display shows **Microphone Off** or **Microphone On** in the menu bar.

- ▶ Press the  button repeatedly until the menu bar is selected.

 



- ▶ **To switch on:** select **Microphone On**.  
The **The microphone is on** message appears briefly in the display. The  symbol disappears from the display/selection window.
- ▶ **To switch off:** select **Microphone Off**.  
The **The microphone is off** message appears briefly in the display and the  symbol appears in the display/selection window.

### Accepting/rejecting a waiting call

If you receive an incoming call while already making a call, the display shows the incoming call. You also hear a tone.


- i** The **call waiting** function is only available if it is supported and has been activated by the mobile phone network provider.

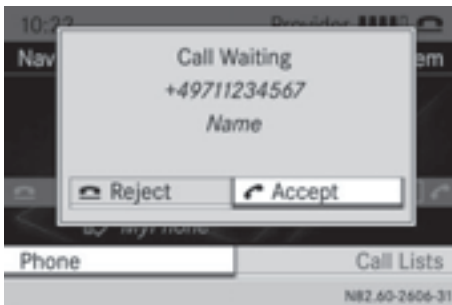

- ▶ **To accept:** press the  button.

or

- ▶ Press the control knob.  
You are connected to the new party. The previous call is ended.

- ▶ **To reject:** press the  button.

or

- ▶ Select **Reject** in the display.  
The waiting call is rejected.

### Transferring a call

#### From the hands-free system to the mobile phone

- i** If you wish to continue a call in private mode, you will need to perform the necessary steps on the mobile phone (see the mobile phone operating instructions).


#### From the mobile phone to the hands-free system

 
- i** If you wish to continue a call using Audio 15, you will need to perform the necessary steps on the mobile phone (see the mobile phone operating instructions).

### Setting the reception and transmission volume

If a mobile phone is connected, you can optimize the reception and transmission volumes – even during a call. Inquire about the best possible settings at an authorized Sprinter Dealer.


- i** If reception and transmission volumes have been incorrectly set, call quality may be impaired.

- ▶ Press the **TEL** button.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Telephone**.
- ▶ Select **Adjust Volume**.

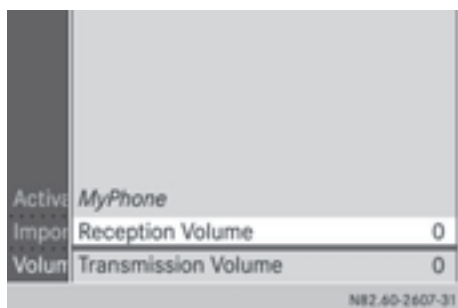

- ▶ Select **Reception Volume** or **Transmission Volume**.

 The display shows the corresponding volume, including the current and previous setting.

- ▶ Select the desired volume (-2 to +2).
- ▶ **To exit the menu:** press the  button twice.

## Using the call lists and telephone book

### Introduction

You can make calls via one of the following call lists:

- received calls (accepted and missed calls)
- dialed numbers

**i** Telephone book entries and call lists of mobile phones with PBAP (**Phonebook Access Profile**) are only available if the mobile phone is connected to Audio 15. If you connect a different mobile phone, you will automatically see its telephone book entries and call lists. Those of the previous mobile phone connected are no longer available.



### What is PBAP?

PBAP stands for **Phonebook Access Profile** and refers to the possibility of transferring telephone book entries and call lists from the mobile phone to Audio 15.

Audio 15 supports this profile. Whether you can transfer the information mentioned depends on your mobile phone:

- Bluetooth® phones with Bluetooth® profile PBAP: telephone book entries and call lists are transferred automatically if Audio 15 and the mobile phone are connected to each other.
- Bluetooth® telephone without PBAP Bluetooth® profile: telephone book entries and call lists are not transferred.

### Selecting a phone number from the call lists

- ▶ Press the  button.
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Call Lists**.





- ▶ **To view received calls:** select **Calls Received**.


or

- ▶ **To view calls made:** select **Calls Dialed**.

The name and phone number of the chosen list is shown in the display.

- i** Missed calls are identified in the **Calls Received** list by the  symbol, located before the name or number.

- ▶ Select the desired entry.
  - ▶ Press the  button.
- or
- ▶ Press the control knob.  
This initiates dialing.

- i** You can also select the **Calls Dialed** call list from the telephone main menu by pressing the  button.

### Deleting call lists

You cannot delete call lists in Audio 15.

### Calling up the phone book

 
 
- ▶ Press the  button.  
The entry line is selected.




- ▶ Select **Name**.  
The display shows the telephone book. Entries are sorted alphabetically by surname.

- i** The telephone book is only available for as long as the mobile phone is connected.


### Calling a contact from the telephone book


- ▶ Call up the telephone book.
- ▶ **To find a contact:** enter the initial letter of the desired contact by using the  to  number keys.  
The selection window skips to the first contact with this initial letter.
- ▶ Selecting the person you wish to call from the selection list.

- ▶ **To call:** press the  button.


or

 
- ▶ Press the control knob.  
If several phone numbers are stored for one contact, a list of these phone numbers appears.

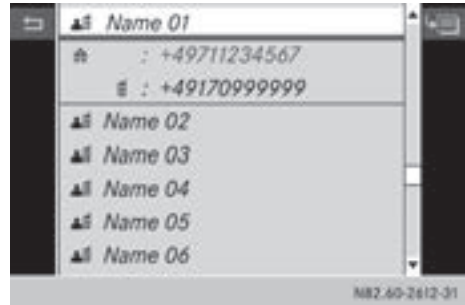




- ▶ Select the desired telephone number.
- ▶ Press the  button again.  
or
- ▶ Press the control knob again.  
This initiates dialing.

### Displaying contact details

 - ▶ Call up the telephone book.
- ▶ Select the desired entry using the control knob.
- ▶ Select the list symbol next to the entry using the  button.
- ▶ Press the control knob.

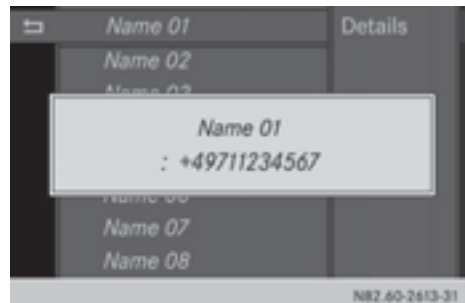

  - ▶ Select **Details**.  
The display shows the contact details of the entry chosen.

- ▶ **To close the detailed display:** press the  button.
- ▶ Press the  button again.  
The display shows the telephone book again.
- ▶ **To exit the telephone book:** press the  again.


 
 
## Deleting/editing contacts

---

You cannot edit or delete contacts transferred onto Audio 15.

### Using speed dial

If you have assigned phone numbers to speed-dial keys on your mobile phone, these may also be used on Audio 15.

-  This access is only possible if it is supported by your mobile phone.
- ▶ Press the  to  number key assigned to the entry for longer than 2 seconds.  
The display shows the telephone main menu with the selected entry. This initiates dialing.

Important safety notes .....	38
Radio mode .....	38
SD memory card and USB device .....	40
Bluetooth® audio .....	45
AUX function .....	47

## Important safety notes

### WARNING

Handling discs while driving may distract you from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Handle discs only when the vehicle is stationary.

### WARNING

If you handle or operate mobile audio/video sources when driving, you will be distracted from the traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only handle or operate these mobile audio/video sources when the vehicle is stationary.

Only operate mobile audio/video sources using the communication equipment integrated in the vehicle when traffic conditions permit. If this is not the case, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

### WARNING


If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

Observe the legal requirements of the country in which you are currently driving.

## Radio mode

### Selecting the radio



- ▶ Press the  button.  
You will hear the last station selected.

### Selecting a station

#### Station search


 
 
- ▶ Press the  or  button briefly.  
You will hear the next receivable station.

### Setting stations manually


 
 
- ▶ Press and hold the  or  button until the desired frequency is reached.  
You will hear the selected station if it is receivable.


### Setting the frequency manually



- ▶ Press the  button.
- ▶ Using the  to  number keys, enter the desired frequency ①.

or

- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Radio**.  
The display shows the Radio menu.
- ▶ Select **Enter Frequency**.
- ▶ Using the  to  number keys, enter the desired frequency ①.

 You can only enter frequencies in the waveband that has been set (▷ page 40).



## Storing stations

### Storing stations manually using the number keypad

You can save the current station.



- ▶ Press and hold any of the **0** to **9** wxyz number keys until the display shows the number you pressed in front of the transmitter frequency **1**. The station is stored under the selected preset.

### Storing stations manually using the station list

 
You can store the current station in the station list.

- ▶ Press the **▼** button repeatedly until the menu bar is selected.
- ▶ Select **Presets**. The display shows a list of the stored stations. The **•** dot indicates the current station.
- ▶ Select the preset where the station is to be stored.
- ▶ **To save the station:** press and hold the control knob until the station frequency is shown in the list. Audio 15 continues to play the station.

### Storing stations automatically

You can automatically save 10 receivable stations to the presets on the selected waveband. The order is determined by reception quality.

- i** Previously stored stations on the waveband will be deleted.
- ▶ Press the **RADIO** button to select the desired waveband.
- ▶ Press the **▼** button repeatedly until the menu bar is selected.
- ▶ Select **Presets**. The display shows a list of the stored stations. The **•** dot indicates the current station.
- ▶ Select **Autostore**. Audio 15 searches for the 10 stations with the best reception and stores them.

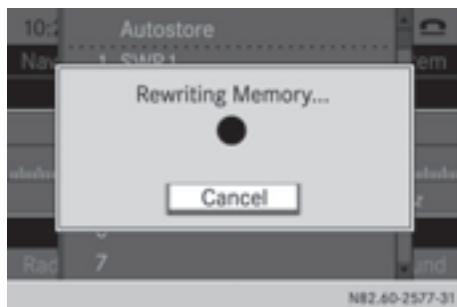

- ▶ **To cancel the storing process:** select **Cancel** during the storing process. Audio 15 cancels the automatic storing process.
  - ▶ **To exit the menu:** select one of the stored stations in the list. Audio 15 plays the selected station.
- or
- ▶ Press the **↩** button.

### Calling up stored stations

#### Calling up stations using the number keypad

- ▶ Press the **RADIO** button to select the waveband.
- ▶ Briefly press a number button from **0** to **9** wxyz. You will hear the station stored in the selected preset, if it is receivable.

### Calling up stations using the station list

- ▶ Press the **RADIO** button to select the waveband.
- ▶ Press the **▼** button repeatedly until the menu bar is selected.
- ▶ Select **Presets**.  
The display shows a list of the stored stations. The **•** dot indicates the current station.
- ▶ Select the desired station.  
You will hear the station stored in the selected preset, if it is receivable.

### Calling up a station using the control knob

 
- ▶ Press the **RADIO** button to select the waveband.
- ▶ Select display/selection window.
- ▶ Select the desired stored station using the control knob.  
You will hear the station stored in the selected preset, if it is receivable.

### Switching wavebands

Audio 15 can receive the following wavebands:

Waveband	Frequency
FM (VHF)	87.7 – 107.9 MHz
MW (medium wave)	530 – 1710 kHz

- ▶ Press the **RADIO** button repeatedly until the display shows the desired waveband.
- or
- ▶ Press the **▼** button repeatedly until the menu bar is selected.
  - ▶ Select the current waveband (e.g. **FM**).  
The display shows a list of the wavebands. The **•** dot indicates the current waveband.

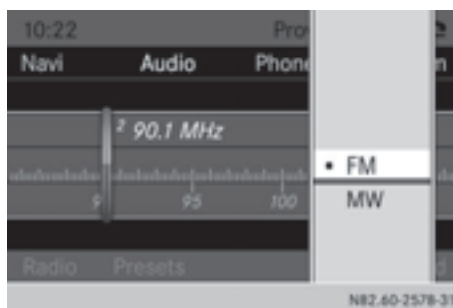

- ▶ Select the desired waveband.  
Audio 15 switches waveband and plays the last station selected.

## SD memory card and USB device

### Important safety notes

#### **WARNING**

SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.

Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

### Inserting/ejecting an SD memory card

#### Inserting an SD memory card

- ▶ Insert the SD memory card into the SD slot with the contacts at the front and facing downwards.  
Audio 15 automatically activates SD mode and loads the files.  
The display shows **Reading Memory Card...**
- i** If Audio 15 cannot find any readable files on the SD memory card, the display shows **No Playable Files**.

Information on readable file formats can be found in the technical data (> page 50).

## Ejecting an SD memory card

- ▶ Press the SD memory card.  
Audio 15 ejects the SD memory card.
- ▶ Remove the SD memory card.

## Connecting a USB device

The port for USB devices is located in the stowage compartment on the driver's side of the instrument panel.

- ▶ Connect the USB device to the USB port in the correct position.  
Audio 15 automatically activates USB mode and loads the files.  
The display shows **Reading USB device...**

**i** If Audio 15 cannot find any readable files on the USB device, the display shows **No Playable Files**.

Information on readable file formats can be found in the technical data (▶ page 50).

 
**i** Due to the wide range of USB devices available on the market, playback cannot be guaranteed for all USB device brands. Information about suitable USB devices can be obtained from an authorized Mercedes-Benz Center.

## Selecting the SD/USB function

- ▶ Press the **MEDIA** button repeatedly, until the display in the menu bar shows **SD/USB**.  
Playback starts.

Alternatively, you can select the SD function in the main menu bar.

- ▶ Press the **▲** button repeatedly until the main menu bar is selected.
- ▶ Select **Audio**.  
The display shows all available audio sources in a selection list.

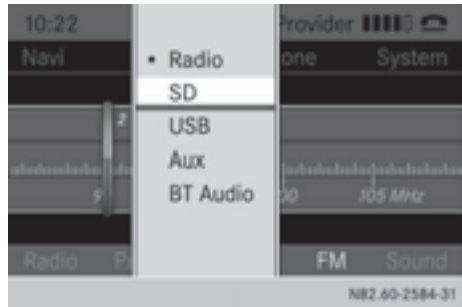

- ▶ Select **SD/USB**.  
Playback starts.

You can also select the SD/USB function accordingly when one of the other audio functions is active.

- ▶ Press the **1** (SD)/**2** (USB) button.

or

- ▶ Press the **▼** button repeatedly until the menu bar is selected.

 
- ▶ Select **Media**.

The display shows all available audio sources in a selection list.



- ▶ Select **SD/USB**.  
Playback starts.

**i** If there is already an SD memory card inserted, you can see the name of the SD memory card instead of **SD**.

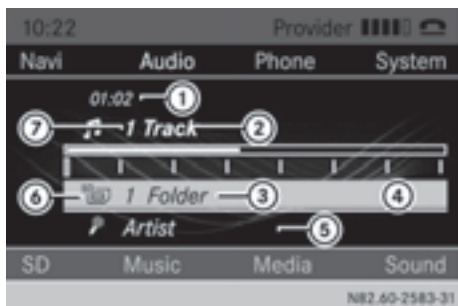

- ① Playback time
- ② Track name
- ③ Folder name
- ④ Current playback option (no display when playing in "normal track order")
- ⑤ Artist
- ⑥ Type of data carrier (in this case: SD memory card)
- ⑦ Track number

### Selecting a track

#### Selecting a track by skipping to a track

 
- ▶ Press the **⏮** or **⏭** button. Audio 15 plays the previous track again or the next track.
- i** The following principles apply to the skip back function:
  - If the track has been playing for less than 8 seconds, playback moves back to the start of the previous track.
  - If the track has been playing for more than 8 seconds, playback moves back to the start of the current track.
- i** If you have selected random playback (> page 44), a random selection follows as the next track.

#### Selecting a track with the control knob

- ▶ Turn the control knob clockwise or counter-clockwise. Audio 15 plays the previous track again or the next track.
- i** If you have selected random playback (> page 44), a random selection follows as the next track.

#### Selecting a track in the track list


 
 


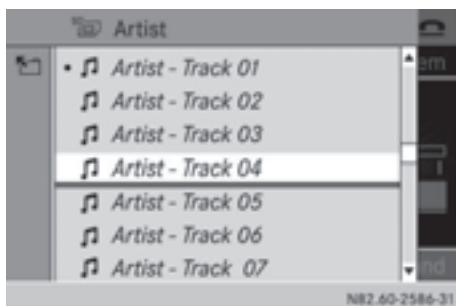- ▶ Press the **▼** button repeatedly until the menu bar is selected.
- ▶ Select **Music**.
- ▶ Select **Folder**. The display shows the track list of the folder in which the track currently playing can be found. The **•** dot indicates the currently playing track.





- ▶ Select the desired track. Audio 15 plays the selected track.

#### Selecting a track by track number





 
- ▶ Press the  button.
- ▶ Using the number keys  to , enter desired track number . Audio 15 plays the selected track.
-  You can only enter numbers of tracks which are in the folder currently being played.



### Fast forward/rewind

- ▶ Press and hold the  or  button. The current title plays quickly backwards or forwards.



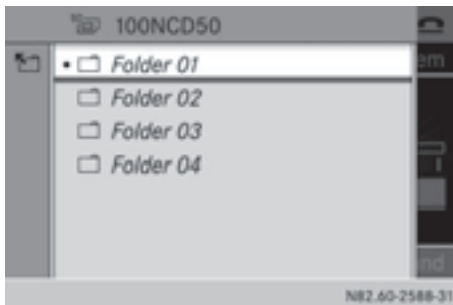


### Changing folders

 - ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Music**.
- ▶ Select **Folder**.  
The display shows the track list of the folder in which the track currently playing can be found. The  dot indicates the track currently playing.




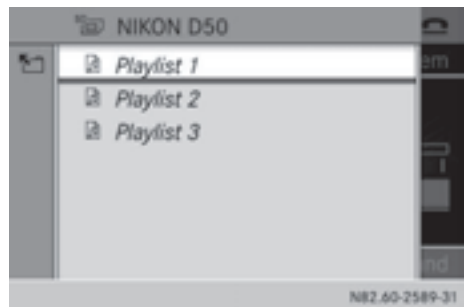 
- ▶ Press the  button.  
The display shows a list of folders on the first level. A  dot indicates the folder in which the track currently playing can be found.
- ▶ Select the desired folder.
- ▶ Select the track in the folder.  
Audio 15 plays the selected track and closes the folder structure.

You can navigate through the folder structure of the SD memory card/USB device as follows:


Process	Operation
The  and  buttons, turning the control knob	Jumps within the folder level
The  or  button	Jumps one folder level higher
Pressing the control knob	Opens a folder/ selects a track
	Exits the SD/USB menu

### Playing a playlist

 - ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Music**.
- ▶ Select **Playlists**.  
The display shows playlists saved on the SD memory card/USB device.



- ▶ Select the desired playlist.  
Audio 15 shows a list of titles associated with this playlist.

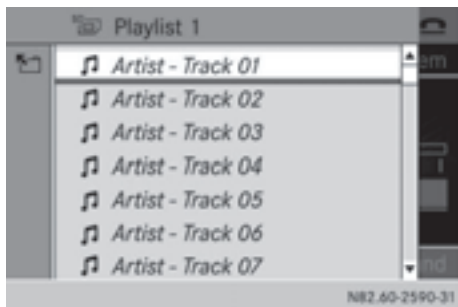


- ▶ Select the title with which the playlist should start. Audio 15 plays the selected track and closes the list.

### Selecting track playback options

 You may select from the following track playback options:

Playback option	Operation
Normal track sequence	You hear the tracks in the same order as they are stored on the SD memory card/USB device.
Random tracks	All the tracks on the SD memory card/USB device are played in a random order.
Random folder	All tracks in the selected folder and sub-folders are played in random order.

- ▶ **To Select the SD/USB menu:** press the  button repeatedly until the menu bar is selected.
- ▶ Select [SD/USB](#).  
The currently selected playback option is indicated by the • dot.

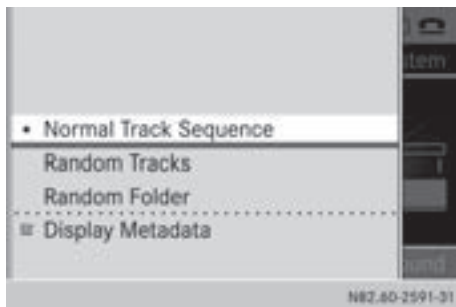

- ▶ **To select a playback option:** select [Normal Track Sequence](#), [Random Tracks](#) or [Random Folder](#).  
You will hear the tracks in the selected playback option.

**i** Depending on the active random playback mode, the **Mix** symbol is shown in the status line in front of the folder, SD memory card or USB device symbols.

### Selecting an active partition (USB only)

 
If the USB device is partitioned, this function is available. Up to 4 partitions (primary, FAT or FAT32 format) are supported.

 
- ▶ **To select the USB menu:** press the  button repeatedly until the menu bar is selected.
- ▶ Select [USB](#).
- ▶ Select [Select Active Partition](#).

### Displaying metadata

There are two ways to display the name of the track in the display window:


- with the names stored in the metadata of the track
- with the file names
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select [SD/USB](#).

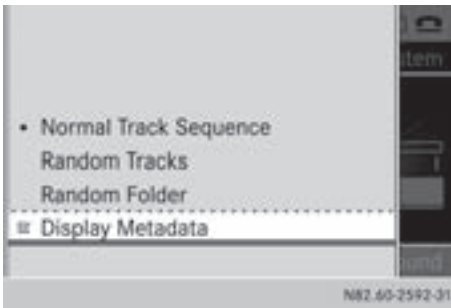


- ▶ Select **Display Metadata**.
- ▶ Switch the function on  or off  using the control knob.
- ▶ **To exit the menu:** press the  button.

### Displaying information about the tracks played

 
You can display information stored in the metadata of a track that is currently playing.

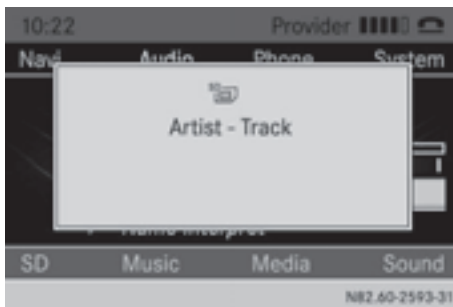


- ▶ Press the  button.  
The display shows the folder name and track title for approximately 3 seconds.

## Bluetooth® audio

### Selecting the Bluetooth® audio function

- ▶ Press the  button repeatedly until **BT Audio** is shown in the menu bar in the display.



Alternatively, you can select the Bluetooth® audio function via the main menu bar.

- ▶ Press the  button repeatedly until the main menu bar is selected.
- ▶ Select **Audio**.  
The display shows all available audio sources in a selection list.



 
- ▶ Select **BT Audio**.

You can also specifically choose the Bluetooth® audio function if the SD, USB or AUX function is active.

- ▶ Press the  button.
- or
- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **Media**.  
The display shows all available audio sources in a selection list.



- ▶ Select **Bluetooth Audio**.
- i** If a Bluetooth® audio device is already connected, you will see its name instead of **BT Audio**.

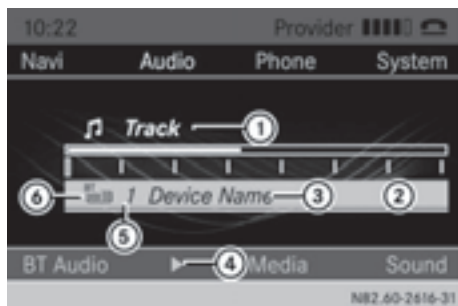

- ① Track/artist
- ② Current playback option (no display when playing in "normal track order")
- ③ Name of the audio equipment
- ④ Starts ► or stops ■ playback
- ⑤ Data medium position in the list of audio sources
- ⑥ Data medium type (Bluetooth® audio)

### Playing audio files

#### Starting/stopping playback

- ▶ Press the button repeatedly until the menu bar is selected.
- ▶ **To start playback:** select ► in the menu bar.  
Playback starts.
- ▶ **To stop playback:** select ■ in the menu bar.  
Playback stops.

#### Interrupting playback

- ❗ Not all Bluetooth® audio devices support this function.
- ▶ Press the button.  
Sound output is switched off. Playback is also stopped on the audio device.

#### Starting playback after a pause

If the Bluetooth® connection breaks, the **No Bluetooth Audio Device Connected** mes-

sage appears in the display. The search for available audio devices begins.

- ❗ When the search has ended, the audio device can be reconnected.



- ▶ Select **Connect Last Device**.  
Playback starts immediately if the audio device permits it.
- ▶ If the **Bluetooth Audio Device Paused** message is shown in the display, start playback manually.

#### Selecting a track

- ❗ Not all Bluetooth® audio devices support this function.
- ▶ Press the / button.  
You will hear the previous/next track.


#### Selecting a playback option

 
You may select from the following track playback options:


Playback option	Operation
Normal track sequence	Tracks are played in the same order as they are stored on the Bluetooth® audio device.
Random tracks	All the tracks on the Bluetooth® audio device are played in random order.

- ❗ Not all Bluetooth® audio devices support this function.



- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **BT Audio**.  
The currently selected playback option is indicated by the • dot.

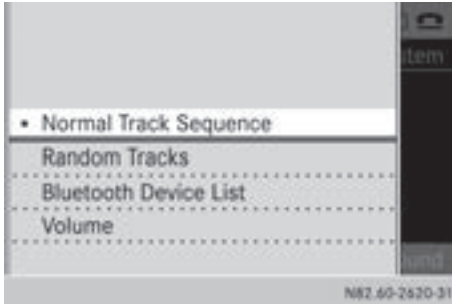


- ▶ **To select a playback option:** select **Normal Track Sequence** or **Random Tracks**. You will hear the tracks in the desired playback option. If you have selected **Random Tracks**, the display in the display/selection window shows **Random** in front of the symbol for the audio device.
- ▶ **To exit the menu:** press the  button.


### Setting the volume

 
If you play audio files from a Bluetooth® device, it is possible that the volume may need to be significantly increased. You can therefore select from two volume options:

Volume option	Operation
Standard	The Bluetooth® device is played back at a normal volume.
Boost	The Bluetooth® device is played back louder.

- ▶ Press the  button repeatedly until the menu bar is selected.
- ▶ Select **BT Audio**.

- ▶ Select **Volume**.  
The current volume option is identified by the • dot.

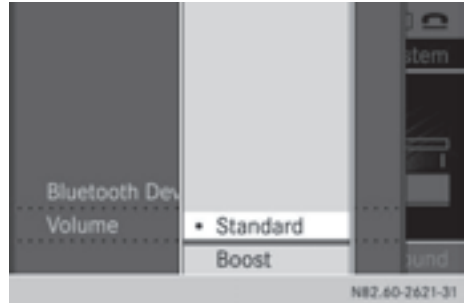

- ▶ **To select the volume option:** select **Standard** or **Boost**.  
You have set the volume option.
- ▶ **To exit the menu:** press the  button.

### AUX function


#### Connecting an external device

You can connect an external device to Audio 15 and play it back via the speakers.


The AUX jack intended for this purpose (3.5 mm stereo audio jack) is located in the stowage compartment on the driver's side of the dashboard.

- ▶ Connect an external device to the AUX jack.
- ❗ An adapter cable is required for the AUX jack.
- ❗ If you connect an external device, Audio 15 does not automatically switch over to the AUX function.

#### Selecting the AUX function

- ▶ Press the  button repeatedly until the display shows **Aux**.  
Audio 15 plays the external device and produces sound through the loudspeakers again.

Alternatively, you can select the AUX function in the main menu bar.

- ▶ Press the  button repeatedly until the main menu bar is selected.

- ▶ Select **Audio**.

The display shows all available audio sources in a selection list.




- ▶ Select **Aux**.

You can also select the AUX function accordingly when the SD, USB or BT Audio function is active.

 
- ▶ Press the  button.

or

- ▶ Press the  button repeatedly until the menu bar is selected.

- ▶ Select **Media**.

The display shows all available audio sources in a selection list.

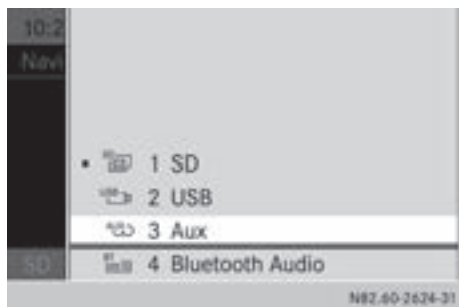


- ▶ Select **Aux**.


## Increasing the volume

 
If you connect an external device via its headphones jack, it may be the case that the volume must be increased significantly. You can therefore select from two volume options:

Volume option	Operation
Standard	The external device playback is at a normal volume.
Boost	The external device playback is louder.

- ▶ Press the  button repeatedly until the menu bar is selected.

- ▶ Select **Volume**.

The current volume option is identified by the  dot.

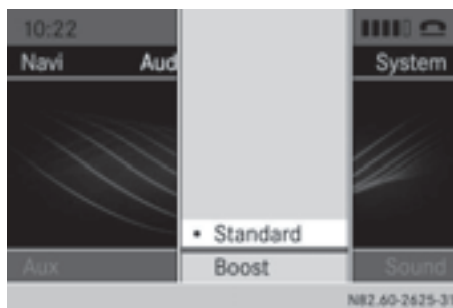

- ▶ **To select the volume option:** select **Standard** or **Boost**.

You have set the volume option.

- ▶ Set the Audio 15 volume to an average value.
- ▶ Connect the external device and select the AUX function.
- ▶ Increase the volume of the external equipment as much as possible without distortion.
- ▶ Set the desired Audio 15 volume.

<b>Requirements for SD memory cards/USB devices .....</b>	<b>50</b>
<b>Supported file formats .....</b>	<b>50</b>
<b>Apple device support .....</b>	<b>50</b>
<b>SD memory card/USB device file structure .....</b>	<b>50</b>

## Requirements for SD memory cards/USB devices

### SD memory cards

Model	SD, SDHC
Capacity	max. 32 GB
Format	FAT/FAT32

- i** SD memory cards are available in many different sizes. Therefore, it cannot be guaranteed that playback is possible with every SD memory card.

### USB devices

The following USB devices are supported:

- USB sticks
- certain MP3 players

Model	USB 2.0
Format	FAT/FAT32, maximum of 4 primary partitions
Electrical consumption	800 mA

- i** USB devices are available in many different sizes. Therefore, it cannot be guaranteed that playback is possible with every USB device.
- i** Do not use a USB extension cable.
- i** Do not use a spiral cable for the USB port.

### Supported file formats

SD memory card/ USB device	MP3, AAC, WMA, WAV, MP4, M4A, M4B (maximum 2 channels)
BT Audio	SBC, MP3

- i** To shorten the initialization period, only load music files onto the USB device, if possible.

- i** Unsupported file formats are not displayed.

Audio 15 does not support any DRM (Digital Rights Management) coded files.

### Apple device support

You can play music files stored on Apple devices via AUX, USB or BT Audio. The following Apple devices are supported:

- iPod® classic, 6th generation onwards (limited support for 5th generation)
- iPod® nano, 3rd generation onwards (limited support for 1st and 2nd generations)
- iPod® touch
- iPhone®

- i** iPod® and iPhone® are registered trademarks of Apple Inc., Cupertino, California, USA.

### SD memory card/USB device file structure

Maximum number of folders per directory	200
Maximum number of tracks per directory	1000
Maximum number of tracks in "Random tracks" random playback	300



